



WOODEN UMBRELLA SWIFT

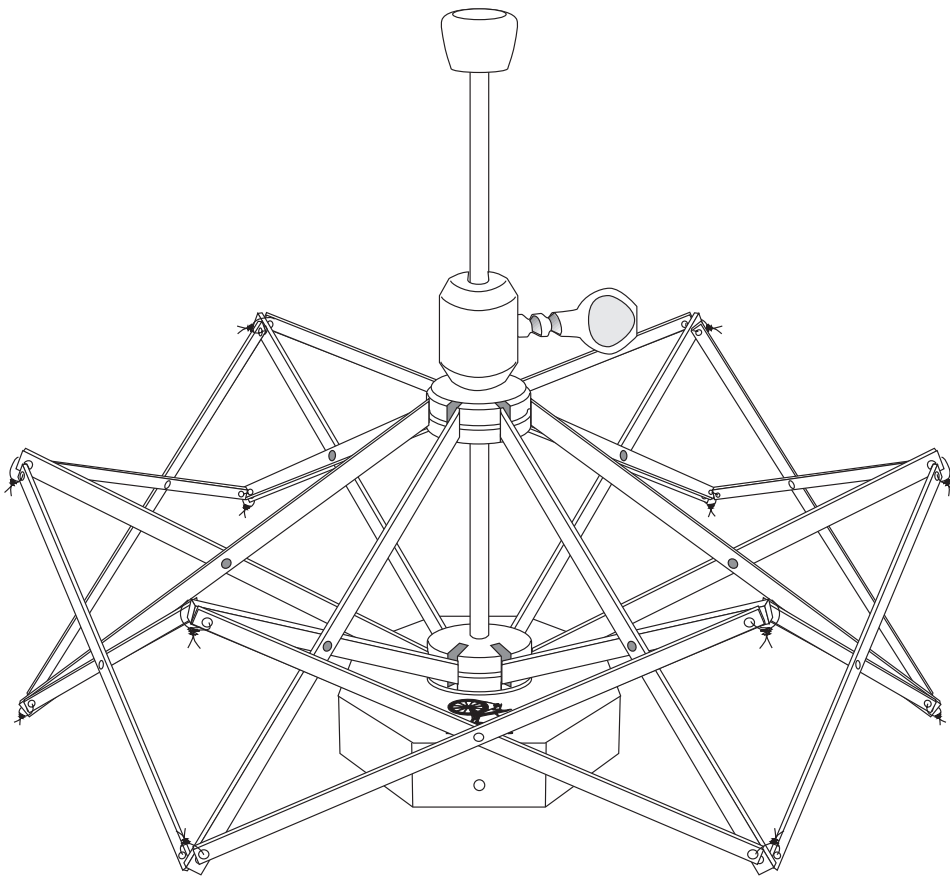




240717V4

How to use the Ashford Wooden Swift.

Warning: Take care to avoid injury due to the sharp ends of the wire ties. Use the sandpaper supplied to remove any sharp edges or corners.

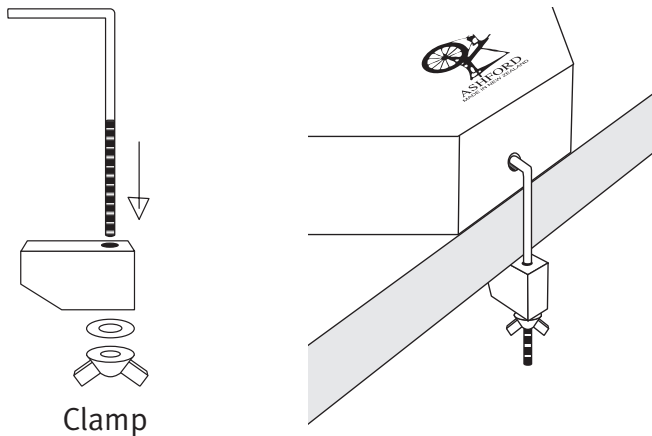

1. Clamp the base to a table.
2. Tie a thread the same size as your hank of yarn approx. 150cm (60ins), around the swift. Push the tension knob down and tighten to ensure it is held firmly in place.
3. Place your hank of yarn over the swift. Push down and retighten the tension knob from time to time as you wind the yarn from the swift.

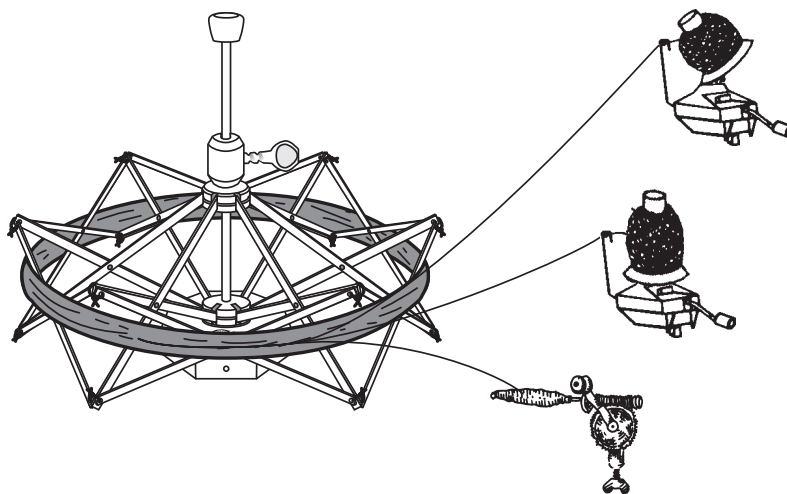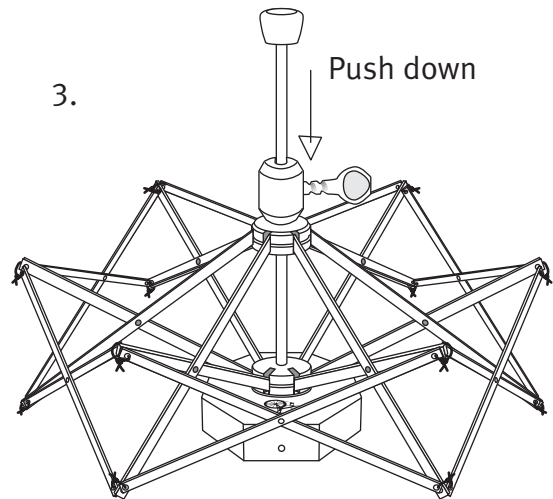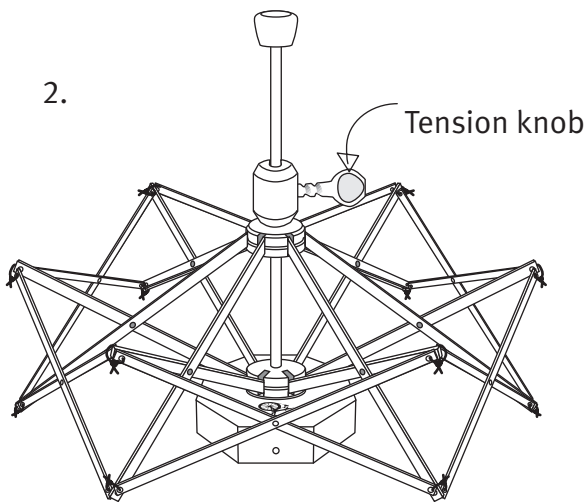

Wool Winder

Cone Winder Bobbin Winder

Bobbin Winder

Use the Wooden Umbrella Swift together with the Wool Winder, Bobbin Winder and Cone Winder.